REFRIGERATOR MODELS: EF36LNB, EF36RNB, IF36LNB and IF36RNB

dacor The Life of the Kitchen.®	Millennia™ Handle Kit, PN AFMBI36H2	INSTALLATION INSTRUCTIONS

Tools Required

- 3/32” Allen wrench (not supplied)

CAUTION: To avoid damage to the refrigerator or handle components, do not use power tools. Use hand tools only for disassembly and assembly.

Parts Included

PN 103731

Millennia Handle Mounting Studs* (4)

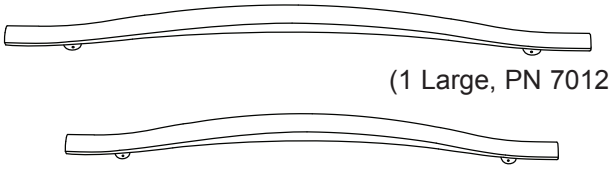

(1 Large, PN 701210)

(1 Small, PN 701209)

Millennia Style Handles

* Required for IF36 series refrigerators only

Installation Preparation

STEP 1 **IF36 Series Refrigerators Only:** Determine the screw thread type and length required based on the paneling thickness and type. The the handle mounting studs accommodate #10 flat head screws/bolts. The top handle mounting stud spacing is: 30” (762 mm). The bottom handle stud spacing is 23 9/16” (598 mm).

STEP 2 **IF36 Series Only:** Install the four (4) Millennia handle mounting studs from the kit in the approximate locations shown. Use the screw/bolt type selected in step 1.

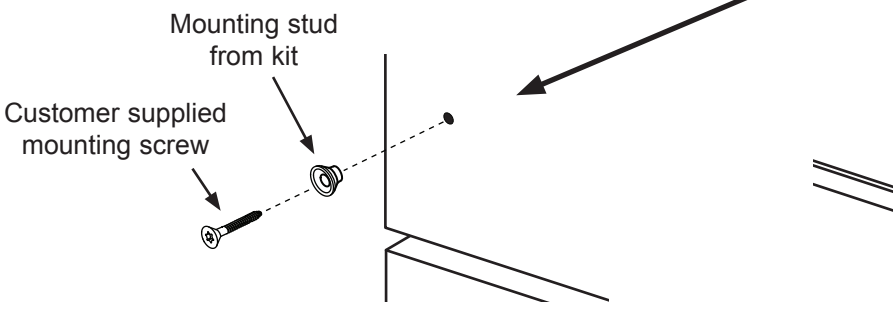

Handle Stud Installation - IF36 Series

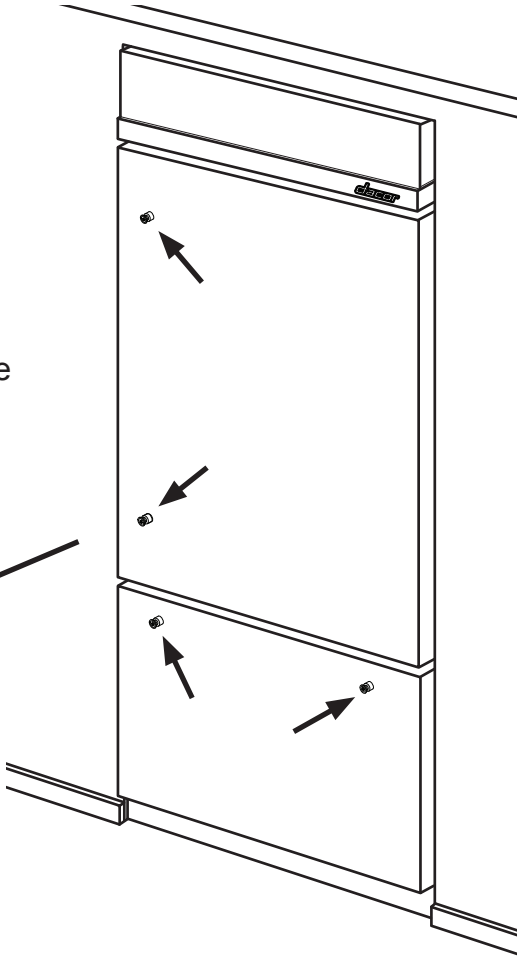

Handle Mounting Stud Locations*

*Studs on top door mount according to door swing

Refrigerator Handle Kit Installation Instructions

Bottom (Freezer) Handle Installation

STEP 3 Find the smallest of the two handles in the kit box.

STEP 4 Mount the handle to the bottom drawer by sliding the holes on the back over the handle mounting studs on the refrigerator. Make sure the set screw holes on the handle are facing toward the bottom. You may need to loosen the set screws using a 3/32” Allen wrench to allow the handle to slide into place.

STEP 5 Carefully tighten the set screws into place using the 3/32” Allen wrench. Be careful not to scratch the finish.

STEP 6 Check to make sure the handle is firmly attached.

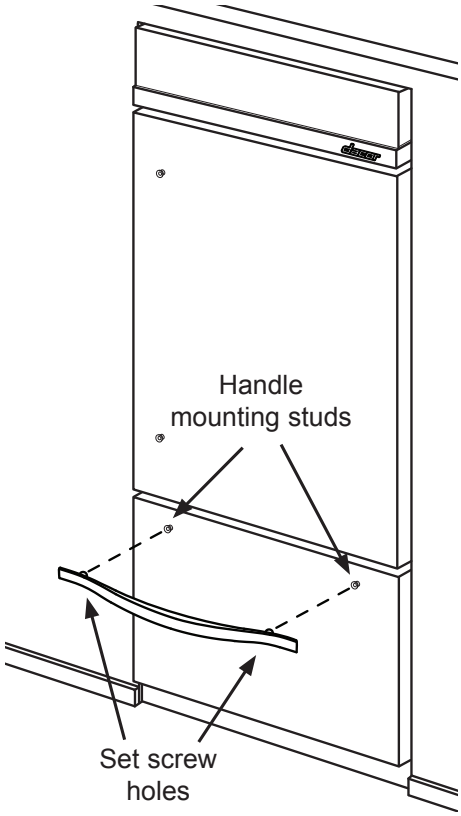

Top Handle Installation

STEP 7 Mount the handle to the top door by sliding the holes on the back over the handle mounting studs on the door. Make sure the set screw holes face away from the edge of the refrigerator. Loosen the set screws if necessary to allow the handle to slide into place.

STEP 8 Carefully tighten the set screws into place using the 3/32” Allen wrench. Be careful not to scratch the finish.

STEP 9 Check to make sure the handle is firmly attached.

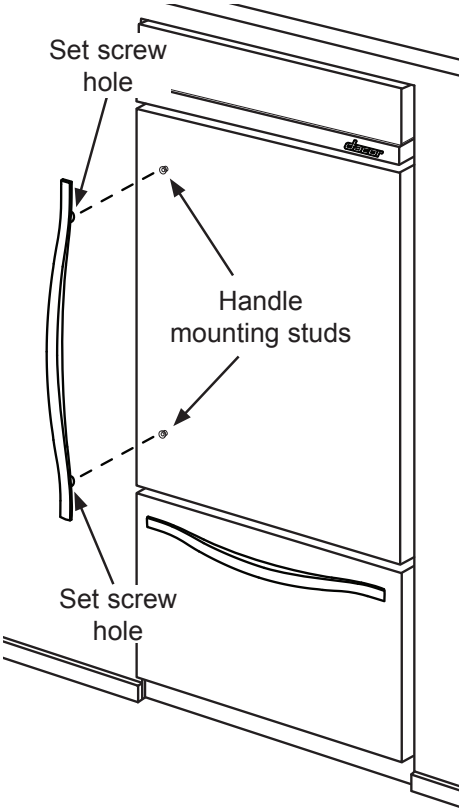

dacor
The Life of the Kitchen.®